

## AeGIS 7000 Series Quick Reference Guide

### How to log into the programming mode

- Step 1** Press and hold the "0" and press the "#" and release both keys (The Welcome screen should stop scrolling, if not repeat this step).
- Step 2** Enter the 4-digits valid Master Code.
- Step 3** Select the Function Code from the table below

**Function Code Table**

CODE	DESCRIPTION	CODE	DESCRIPTION
*	Exit the programming mode (local programming) or clear the existing program.	10	Edit Welcome Message
#	To accept program	46	Display System Information
00	Change Unit Master Code	50	Clear the EEPROM Memory
01	Add a Tenant	70	Change Talk Time
02	Modify a Tenant	71	Change Door Open interval
03	Delete a Tenant	72	Change Lock-out Count
04	Clear All Tenants	73	Select Tone/Pulse Dialing
05	Manual Lock/Unlock Door	74	Enable/Disable Auto Answer
06	Change Directory Digits	75	Enable/Disable Key-Press Beep
07	Single/ Multi-Systems	76	Enable/Disable Speaker Beep when the System Open the Gate/Door
08	System Number	78	View Directory by Name
		91	Exit Programming Mode (Remote Programming Via Phone)

**Parameter Default Settings Table**

00 (Master Code)	0000	72 (Lock-Out Count)	3 Tries
06 (Directory Digits)	3 Digits	73 (Unit Dialing)	Tone Dialing
70 (Talk Time)	60 Seconds	74 (Auto Answer)	Enable (always answer)
71 (Open Interval)	12 Seconds	75 (Beep Enable)	76 (Beep when Door/Gate Open by the System)

#### KEYPAD LAYOUT

QZ- 1	ABC 2	DEF 3
GHI 4	JKL 5	MNO 6
PRS 7	TUV 8	WXY 9
* 0		# 0

Refer to the Installation and Program Manual for more detail

#### OPERATION

- To place a call from the Aegis 7000 Series:** press number "3" (to view name from A-Z) or "6" (to view name from Z-A) and press "#".
- To place a direct call:** press "#" wait for dial tone and enter the tenant's directory number.
- To grant access to visitor:** the tenant must press "9".
- To use the personal Access Code:** Press and hold "0" and press "\*" and release both keys and enter the 4-digits access code.
- To extend a talk time:** tenant must press "#" after hearing the time out warning beep. Do not press the "#" before you hear the warning beep.
- To call into the AeGIS system:** dial the AeGIS's phone number, you will hear one short beep if your call is connected and press "\*" to talk to your visitor and press "9" if you want to grant access to your visitor. **This feature does not work with multi-systems on single phone line.**

#### Remote Phone Programming

##### Single System in Single Telephone Line

- Step 1** **Log into the programming mode:** Call into the Aegis 7000 Series, the Aegis will answer with either ONE SHORT BEEP (door is in open position) or TWO SHORT BEEPS (door is in closed position).
- Step 2** Press "#" and your valid Master Code. If your Master Code has been accepted, you will hear two short beeps and you are in programming mode, if your Master Code has been rejected, you will be disconnected from the system.
- Step 3** Used the Function Codes above to perform the programming. Press "91" and "#" to disconnect the connection.

##### Multi-Systems in Single Telephone Line

- Step 1** **Log into the programming mode:** Call into the Aegis 7000 Series, the Aegis will answer with either ONE SHORT BEEP (door is in open position), TWO SHORT BEEPS (door is in closed position) or ONE LONG BEEP (Combination of closed and open).
- Step 2** Press the system ID number (1-8) and press "#" and enter your valid Master Code (two short beeps).
- Step 3** Used the Function Codes above to perform the programming. Press "91" and "#" to disconnect the connection.